



Assembly Instructions

Timberland Chair & Timberland Garden Bench



*Thank you for choosing **A&L Furniture Co.***

We hope that this piece brings you many years of enjoyment!

For help with assembling your furniture,
or if you have missing hardware, please email us at
help@aandlfurniture.com or call us at 866-896-5747

PARTS (included)

- (A) Seat Assembly (1)
- (B) Back Assembly (1)
- (C) Left Leg Assembly (1)
- (D) Right Leg Assembly (1)



Size will vary by item

HARDWARE (included)

- (a) 3½" Bolts (6)
- (b) 2¾" Bolts (2)
- (c) Allen Wrench (1)



STEP 1

Attach the back assembly to the seat assembly. Align the predrilled holes on the bottom of the back side pieces with the threaded inserts on the back of the seat. Attach with two 3½" bolts. (See photos 1 & 2.)

NOTE: Do not fully tighten these bolts until Step 2 is completed.

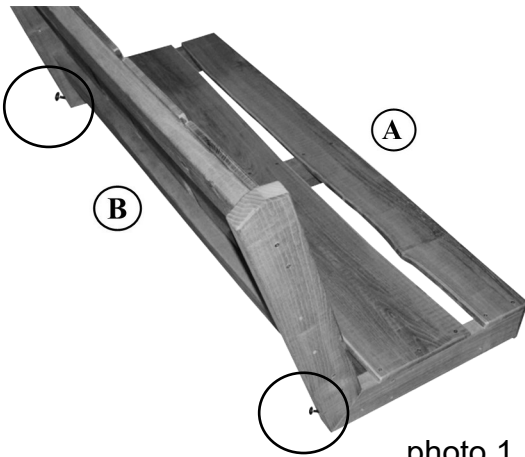


photo 1

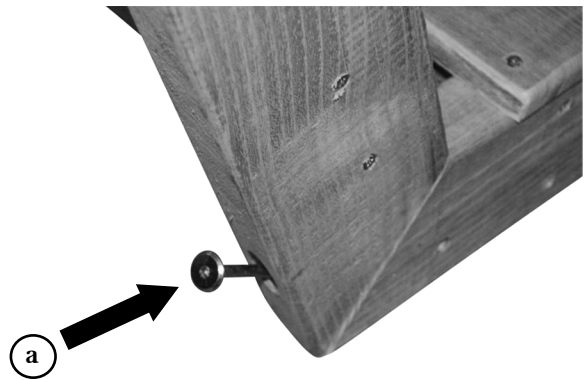


photo 2

STEP 2

Attach the right & left arm & leg assemblies as shown. Align the two predrilled holes in the legs with the threaded inserts in the side of the seat & fasten with two 3½" bolts. Align the hole in the back of the arm with the hole in the side of the back & fasten with a 2¾" bolt. (See photos 3 & 4.) If you have problems aligning the holes, loosen the bolts that attach the back to the seat. Fully tighten all bolts with the Allen wrench.

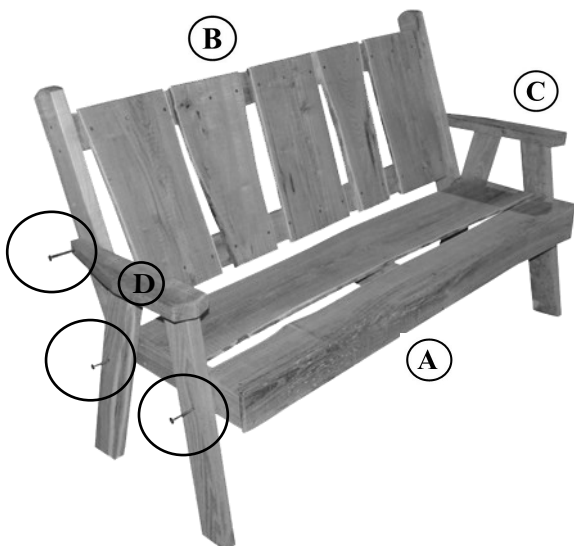


photo 3

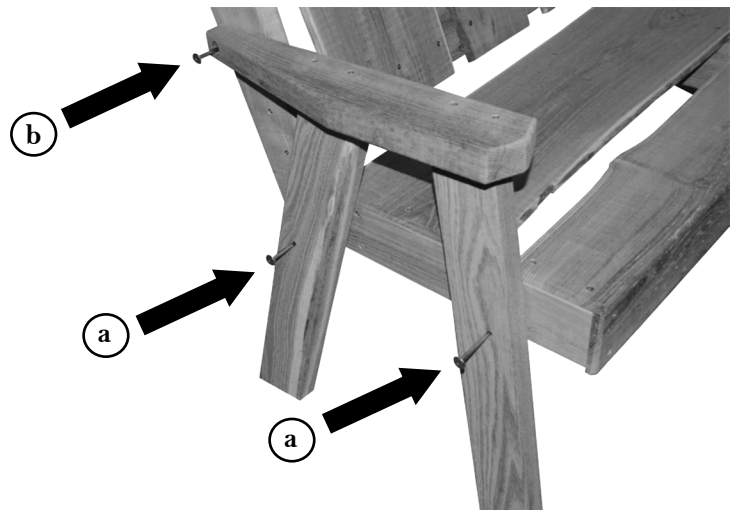


photo 4