




Assembly Instructions

Timberland Chair Swing & Timberland Porch Swing

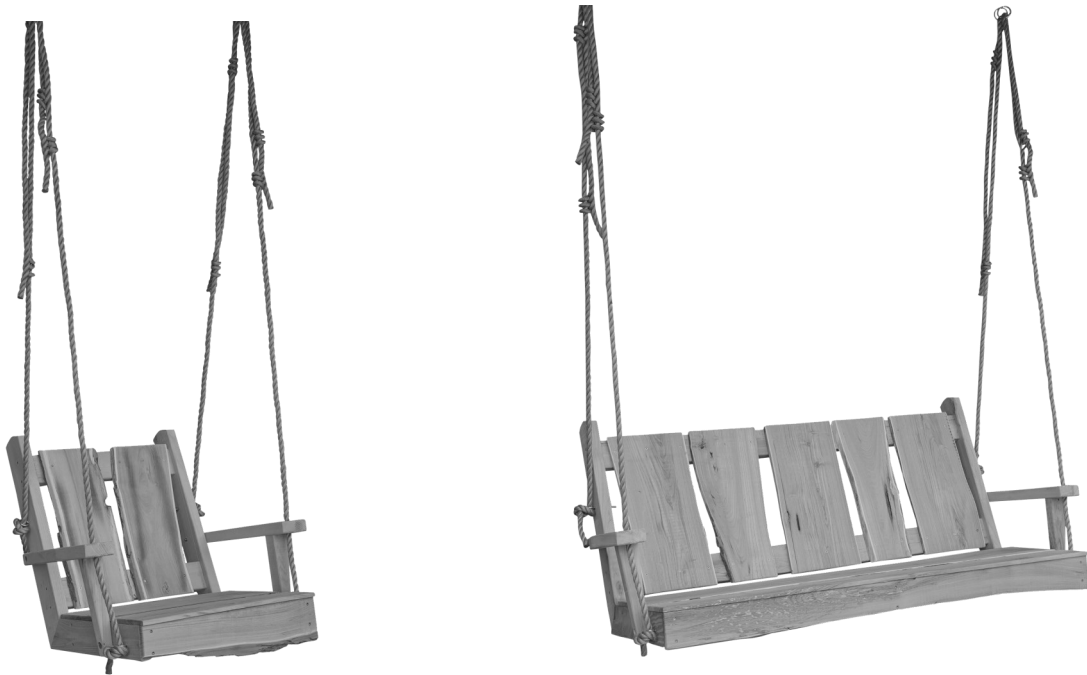

*Thank you for choosing **A&L Furniture Co.***

We hope that this piece brings you many years of enjoyment!

For help with assembling your furniture,
or if you have missing hardware, please email us at
help@aandlfurniture.com or call us at 866-896-5747

PARTS (included)


- (A) Swing Seat (1)
- (B) Back Rest (1)
- (C) Left Arm (1)
- (D) Right Arm (1)



Size will vary by item

HARDWARE (included)

- (a) $\frac{1}{4}$ " x $3\frac{1}{2}$ " Bolts (2)
- (b) $\frac{1}{4}$ " x $2\frac{3}{4}$ " Bolts (4)
- (c) $\frac{5}{16}$ " x 4" Eyebolts (4)
- (d) Flat Washers (4)
- (e) $\frac{5}{16}$ " Hex Nuts (4)
- (f) Allen Wrench (1)
- (g) Rope (4)

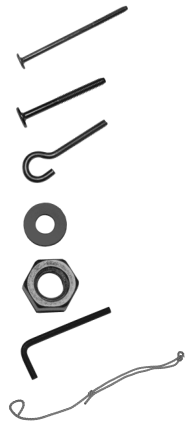

TOOLS NEEDED

$\frac{1}{2}$ " Wrench or Socket

$\frac{7}{16}$ " Wrench or Socket

STEP 1

Attach back rest to swing seat. Insert $3\frac{1}{2}$ " bolts through predrilled holes in back rest and screw into metal inserts in swing seat. (See photos 1 & 2.) **Do not fully tighten until step 2 is completed.**

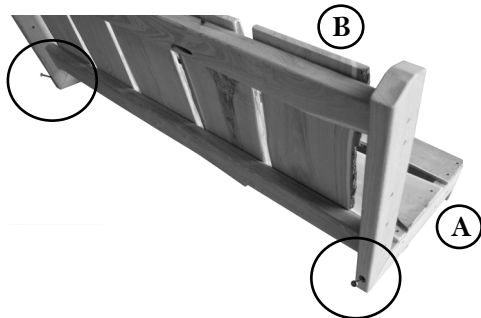


photo 1

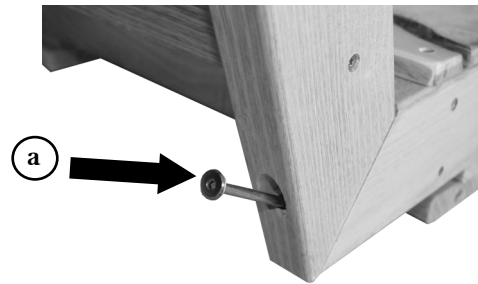


photo 2

STEP 2

Attach the arms using $2\frac{3}{4}$ " bolts to the seat and back. (See photos 3 & 4.) Once everything is attached and all bolts are started you can tighten everything using the Allen wrench.

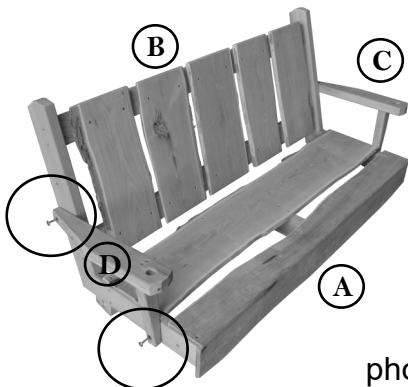


photo 3

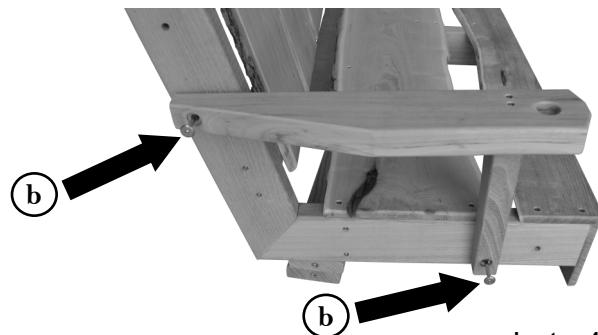


photo 4

STEP 3

Now you need to put one eyebolt in seat and one in back on both ends of the swing. (See photo 5.) The holes for the eyebolts are not threaded. You will need to use washers and nuts as shown. (See photo 6.) Using the ½" wrench or socket tighten until eyebolt is in against the wood.

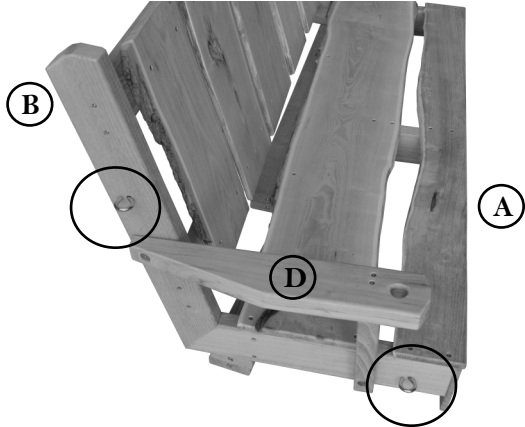


photo 5

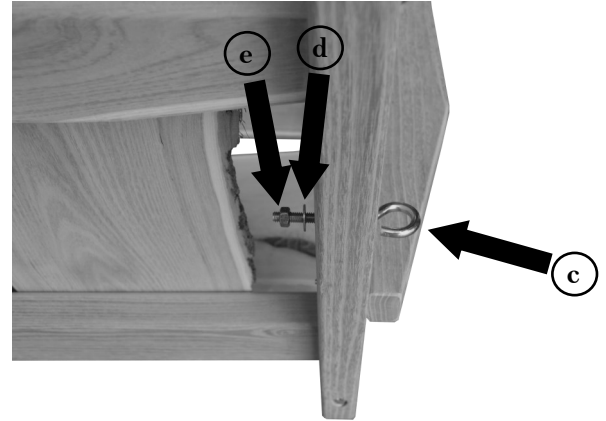


photo 6

STEP 4

Thread the end of one of the ropes through each eyebolt from the top. (See photo 7.) Make a knot in the end of the rope below the eyebolt. (See photos 8, 9 & 10.) Pull the knot up against the eyebolt. (See photo 11.)



photo 7



photo 8



photo 9

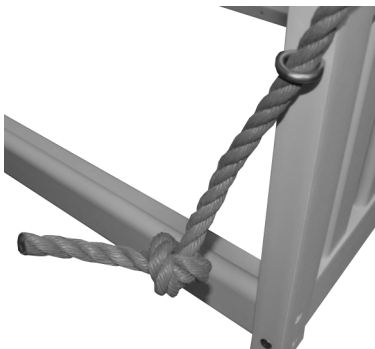


photo 10



photo 11

The rope can also be adjusted to make the swing hang a little higher or lower. (See series of photos below.) Note: You will receive the ropes adjusted short in length. The photos show the ropes being adjusted long in length.

