



*Assembly Instructions*

## Swingbed



*Thank you for choosing **A&L Furniture Co.***

*We hope that this piece brings you many years of enjoyment!*

For help with assembling your furniture,  
or if you have missing hardware, please email us at  
[help@aandlfurniture.com](mailto:help@aandlfurniture.com) or call us at 866-896-5747

## PARTS (included)


(A) Swingbed Seat (1)

(B) Swingbed Back (1)

(C) Left Arm (1)

(D) Right Arm (1)

Chains (4)  
or if you ordered  
Ropes (4)

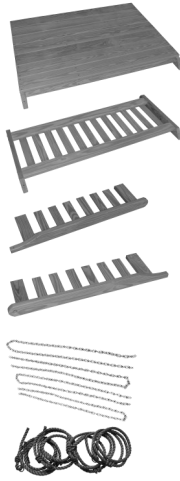

## TOOLS NEEDED

Power Drill or Screw Gun

1/2" Wrench or Socket

## HARDWARE (included)

1/4" x 4 3/4" Bolts (2)

1/4" x 2 3/4" Bolts (6)

5/16" x 4" Eyebolts (4)

Flat Washers (4)

Hex Nuts (4)

1 3/4" Wood Screws (14)

Allen Wrench (1)

Square Drive Bit (1)

(a)

(b)

(c)


(d)

(e)

(f)

(g)

(h)

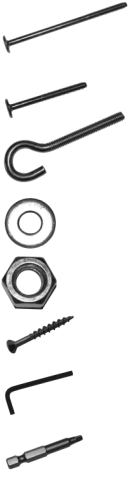

## STEP 1

Attach the back to the seat. (See photo 1.) Insert a 4 3/4" bolt through the predrilled hole in the upright piece on each end of the back and screw them into the metal inserts in the seat. (See photo 2.) **Do not fully tighten until the arms are attached.**

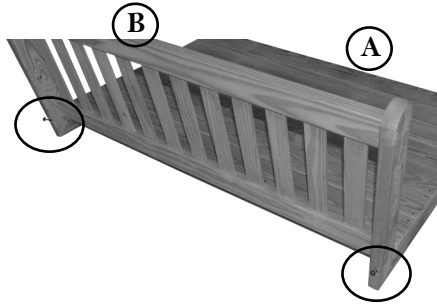


photo 1

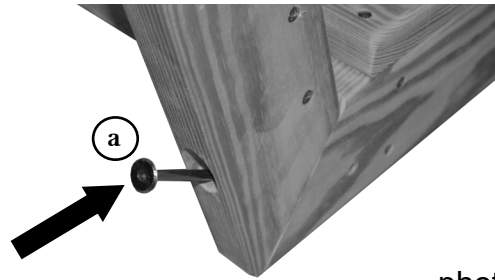


photo 2

## STEP 2

Attach the arms to the seat and back using 2 3/4" bolts. (See photos 3 and 4.) When this is done you may tighten all bolts using the Allen wrench.

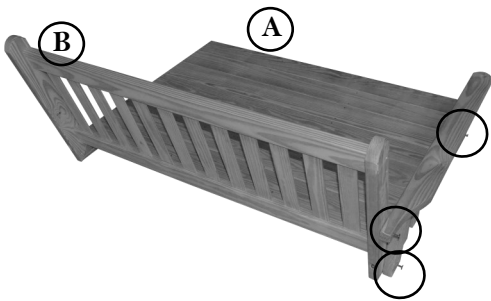


photo 3

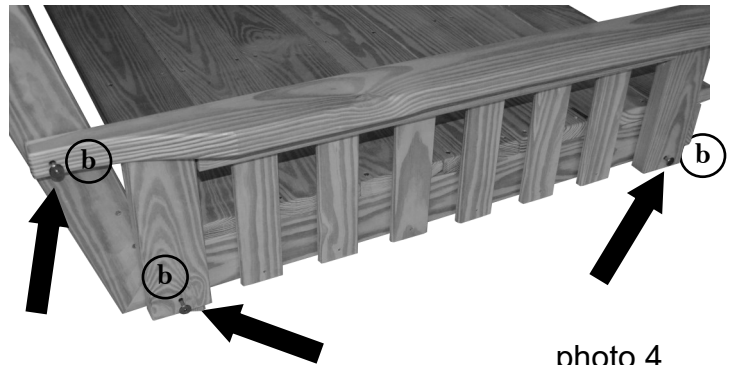


photo 4

## STEP 3

Now screw the slats of the arms to the seat sides with the 1 3/4" wood screws. (See photo 5.) The included square drive bit can be used with a power drill or screw gun for this step. (The screws are self drilling and do not need predrilled holes.)

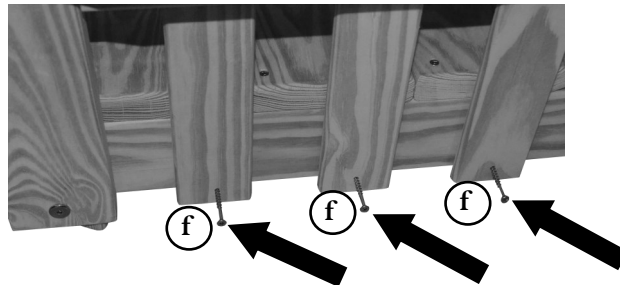


photo 5

## STEP 4

Now insert an eyebolt into the predrilled holes in front of the arm on the seat and above the arm on the back. (See photos 6 & 7.) Put a washer on each eyebolt and screw a nut on after it. If you are using ropes they may be fully tightened right away. For chains you will need to slip the chain on to the hook end of the eyebolt before tightening. (See photos 8 & 9.) Now using  $\frac{1}{2}$ " wrench or socket tighten the nut on each eyebolt until the open end of the eyebolt pulls in against the wood making it impossible for the chain to slip off. You will need somebody to lift the front of the swingbed while you tighten the front eyebolts. If you are using rope, see detailed rope instructions below.

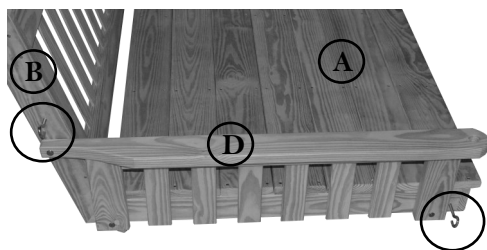


photo 6

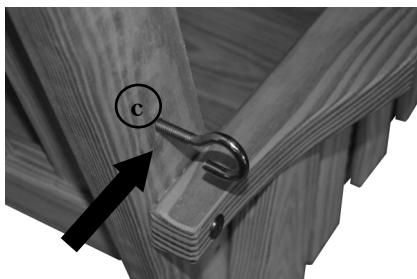


photo 7



photo 8

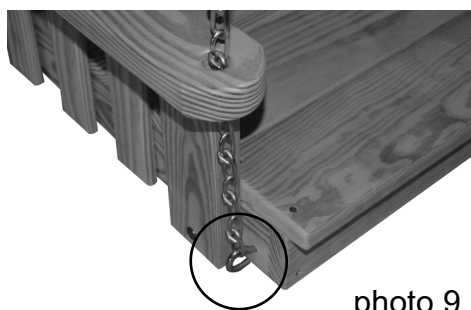


photo 9

## STEP 5

Attach the rope to the swingbed. Take a rope, put the end through the hole in the armrest, & through the eyebolt below the arm. Pull on through the eyebolt & make a knot in the end of the rope. (See photos below.) Attach another rope to the eyebolt in the back assembly the same way then repeat on other side. The swingbed is now ready to hang. Hook the rings on hooks at the ceiling or if you purchased comfort springs hook the rings on one end of the springs and hook the other end of the springs to the ceiling. The swingbed can be hung from two points or four points at the ceiling.

## STEP 6

You will now need to adjust the ropes until the swingbed is at the desired height. The ropes are all fully adjustable. To lower the swingbed push the bottom loops on the end of the rope further up the rope then hold the top loops with one hand & pull the end of the rope up through the loops. To raise the swingbed pull the rope through the loops in the opposite direction. The ropes attached to the front of the swingbed will need to be adjusted to a different length than the ropes attached to the back. If the swingbed hangs crooked adjust the ropes accordingly until it hangs properly.

### How to make a knot:

