



*Assembly Instructions*

## **Twin or Full Trundle**



*Thank you for choosing **A&L Furniture Co.***

*We hope that this piece brings you many years of enjoyment!*

For help with assembling your furniture,  
or if you have missing hardware, please email us at  
[help@aandlfurniture.com](mailto:help@aandlfurniture.com) or call us at 866-896-5747

## PARTS (included)

- Ⓐ Trundle Front (2)
- Ⓑ Wheel Board (2)
- Ⓒ Bottom Board (5)



## HARDWARE (included)

- Ⓐ Square Drive Bit (1)
- Ⓑ 2" Wood Screw (28)



## TOOLS NEEDED

Power Drill and/or Screwgun  
Another Person to Help

## STEP 1

Fasten the wheel boards to the trundle fronts. (See photos 1 & 2.) Predrilling for the screws should not be necessary as they are self drilling, however, if you wish to do so it will make the screws a little easier to drive. (Drill bit should be no larger than  $\frac{7}{64}$ ".)

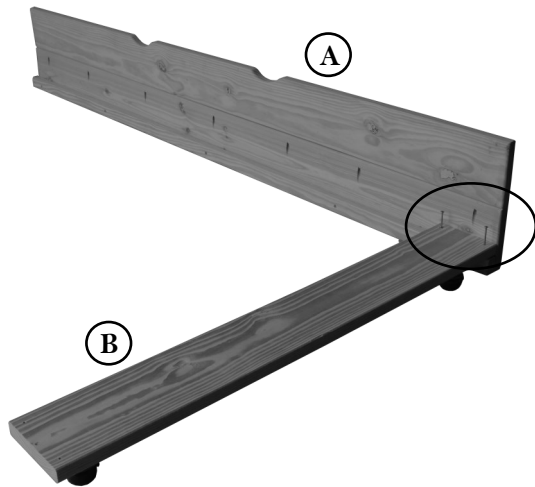


photo 1

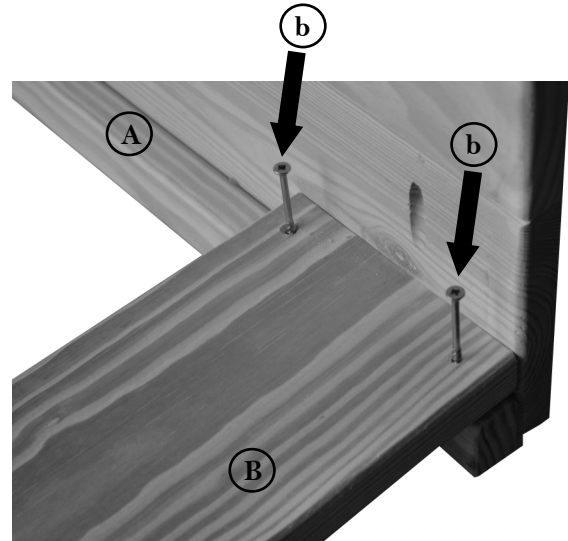


photo 2

## STEP 2

Place the bottom boards evenly across the wheel board/trundle front assembly. (See photo 3.) Fasten using the 2" wood screws.

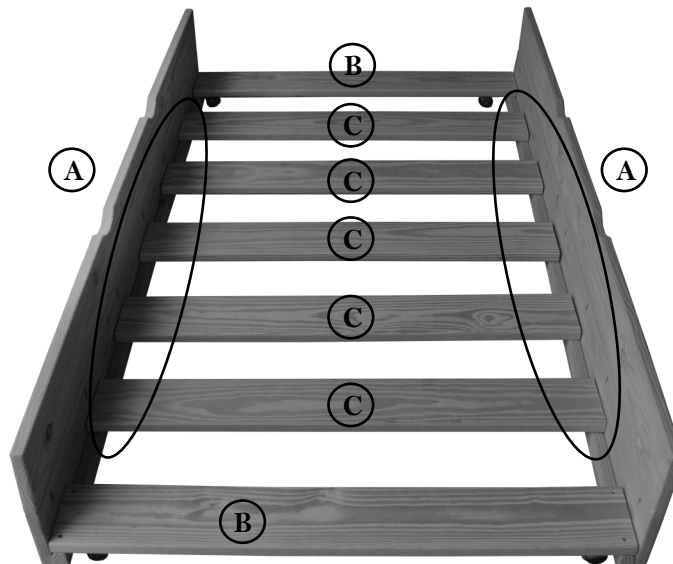


photo 3