



Assembly Instructions

VersaLoft Mission Hanging Daybed




*Thank you for choosing **A&L Furniture Co.***

We hope that this piece brings you many years of enjoyment!

For help with assembling your furniture,
or if you have missing hardware, please email us at
help@aandlfurniture.com or call us at 866-896-5747

PARTS (included)

- (A) Headboards (2)
- (B) Backrest (1)
- (C) Front Rail (1)
- (D) Mattress Boards (7)

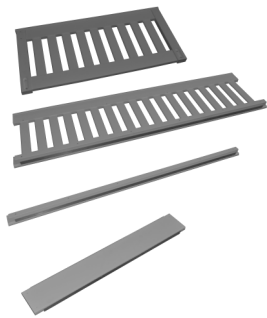

TOOLS NEEDED

Power Screwdriver

HARDWARE (included)

- (a) 4" Eyebolts (4)
- (b) 2³/₄" Bolts (12)
- (c) Dowel Nuts (8)
- (d) 1³/₄" Screws (30)
- (e) Allen Wrench (1)
- (f) Square Drive Bit (1)
- (g) Chains or Ropes (4)




STEP 1

Insert two dowel nuts in the holes in each end of the bottom backrest board and on the inside of the front rail. Push them in all the way and turn so the threaded holes align with the holes in the ends of the rails. (See photos 1 & 2.)



STEP 2

Attach the backrest to the back posts. Place the bottom rail in the notches in the inside of the posts. Insert four 2³/₄" bolts through the top and bottom holes in the posts. Turn the top bolts into the threaded inserts in the backrest and the bottom bolts into the dowel nuts in the bottom rail. A straight screwdriver can be used to properly align the dowel nuts. (See photo 3.)

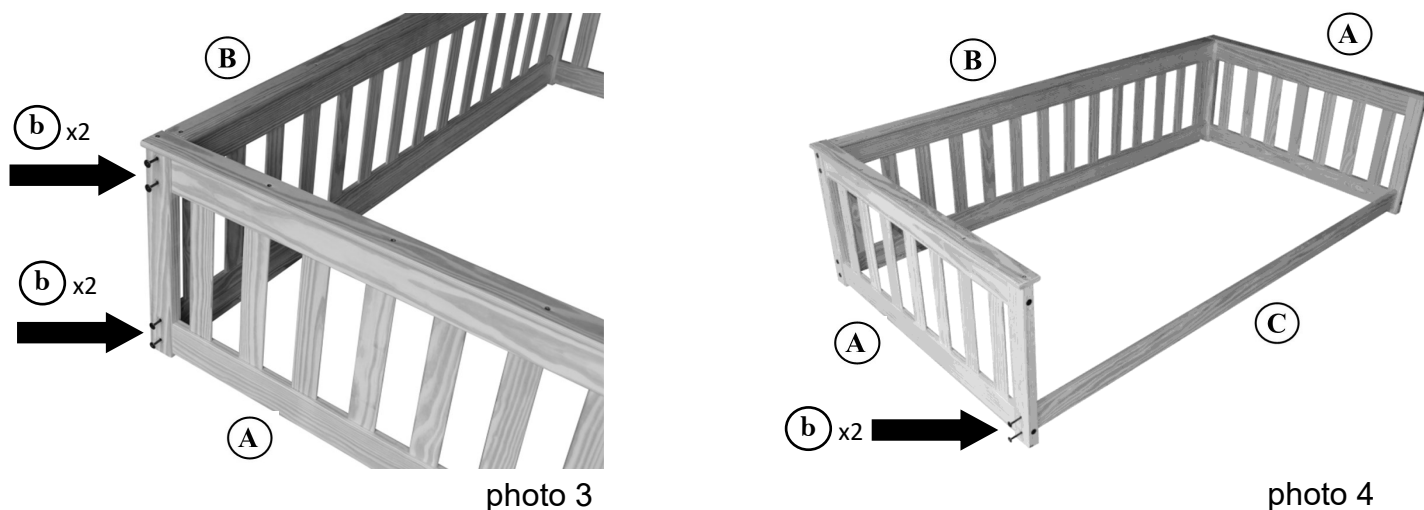

STEP 3

Place the front rail in the notches in the front posts. Turn two 2³/₄" bolts into the dowel nuts in each end. (See photo 4.)

STEP 4

Place the mattress boards in the frame and space them evenly. Fasten with 1 $\frac{3}{4}$ " screws, 4 screws per board. (See photos 5 & 6.)

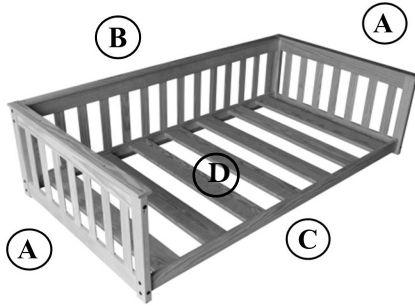


photo 5

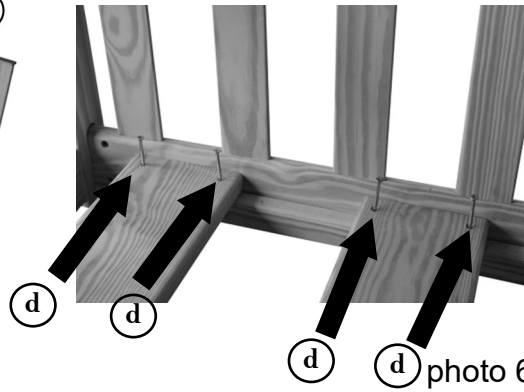


photo 6

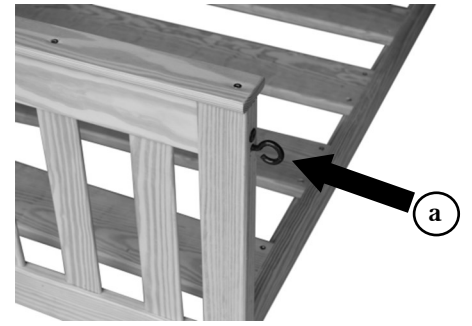


photo 7

STEP 5

Find the 4 holes in the front and back posts close to the top. Insert the 4" eyebolts & turn into the inserts. (See photo 7). If you are attaching chain, hook the chain into the eyebolts before fully tightening them.

STEP 6

If you are attaching ropes, thread the end of one of the ropes through each eyebolt from the top. (See photo 8.) Make a knot in the end of the rope below the eyebolt. (See photos 9, 10 & 11.) Pull the knot up against the eyebolt. (See photo 12.)

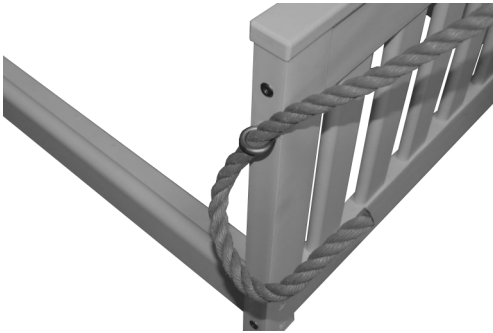


photo 8

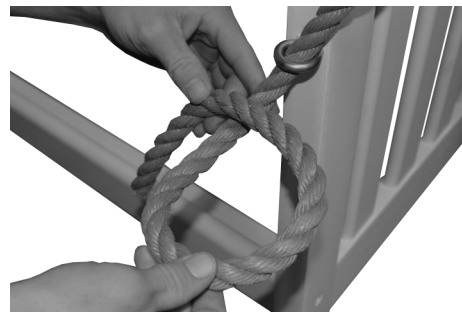


photo 9



photo 10

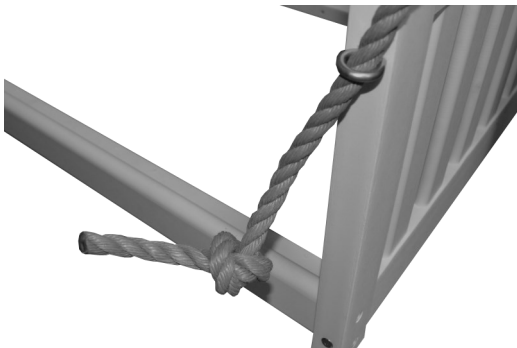


photo 11

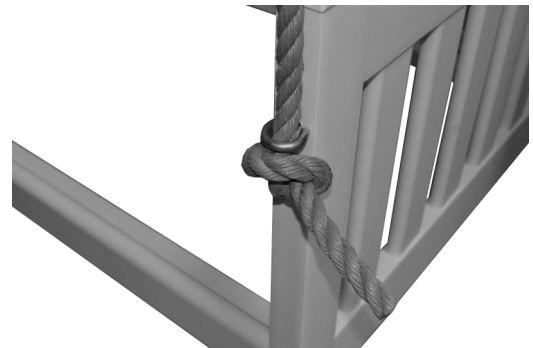


photo 12

The rope can also be adjusted to make the swing hang a little higher or lower. (See series of photos below.) Note: You will receive the ropes adjusted short in length. The photos show the ropes being adjusted long in length.

