



Assembly Instructions

2 Piece Drawer Set



*Thank you for choosing **A&L Furniture Co.***

We hope that this piece brings you many years of enjoyment!

For help with assembling your furniture,
or if you have missing hardware, please email us at
help@aandlfurniture.com or call us at 866-896-5747

PARTS (included)

- (A) Drawer Front (4)
- (B) Drawer Side (4)
- (C) Wheel Board (4)
- (D) Bottom Board (8)
- (E) Filler Strip (2)



HARDWARE (included)

- (a) 1/4" x 2" Bolt (16)
- (b) Allen Wrench (1)
- (c) Square Drive Bit (1)
- (d) 1 3/4" Screw (54)



TOOLS NEEDED

Power Drill and/or Screwgun
Another Person to Help

STEP 1

Attach the drawer fronts to the drawer sides using the 2" bolts. (See photo 1, 2 & 3.) Use the Allen wrench to tighten the bolts.

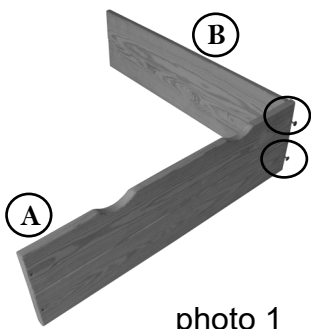


photo 1

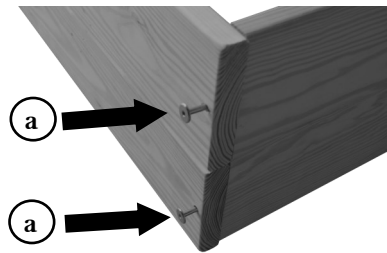


photo 2

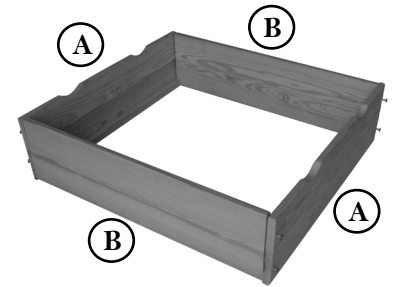


photo 3

STEP 2

Install the wheel boards as shown (photos 4 & 5) using the 1 3/4" screws. You should not have to predrill for the screws as they are self drilling, however, doing so may make them easier to drive. If you do predrill, use a drill bit no larger than 7/64". Use the square drive bit with screwgun or power drill to drive the screws.

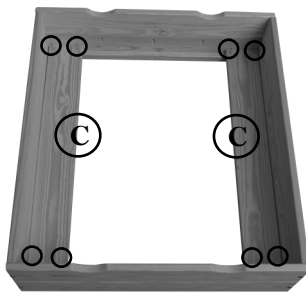


photo 4

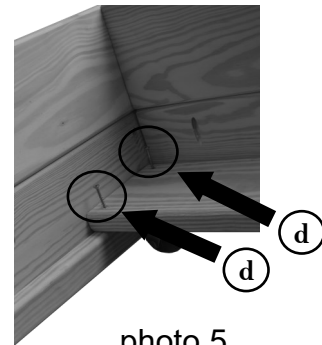


photo 5

STEP 3

Fasten the bottom boards and filler strip with 1 3/4" screws. (See photo 6 & 7.) Repeat steps 1 through 3 for the second drawer.

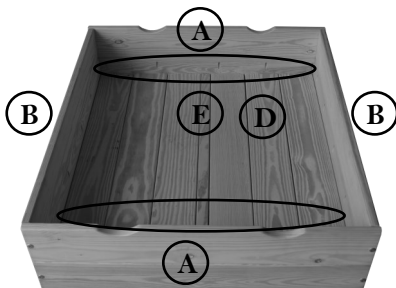


photo 6

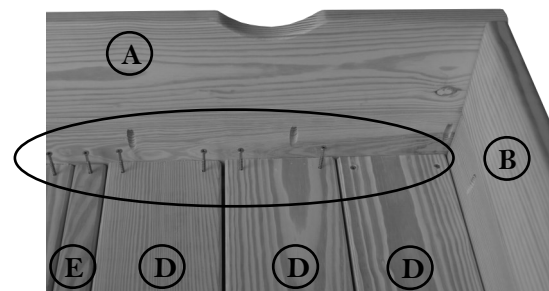


photo 7