



*Assembly Instructions*

## **Timberland Glider Chair & Timberland Glider Bench**




*Thank you for choosing **A&L Furniture Co.***

*We hope that this piece brings you many years of enjoyment!*

For help with assembling your furniture,  
or if you have missing hardware, please email us at  
[help@aandlfurniture.com](mailto:help@aandlfurniture.com) or call us at 866-896-5747

## PARTS (included)

- Ⓐ Seat Assembly (1)
- Ⓑ Back Assembly (1)
- Ⓒ Left Leg Assembly (1)
- Ⓓ Right Leg Assembly (1)
- Ⓔ Glider Braces (2)
- Ⓕ Left Glider Foot (1)
- Ⓖ Right Glider Foot (1)

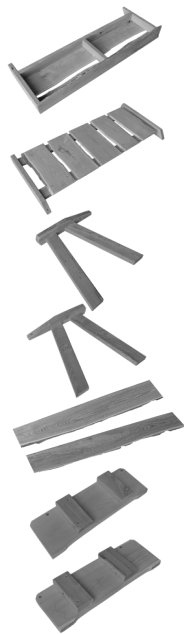

Size will vary by item

## HARDWARE (included)

- Ⓐ 3½" Bolts (6)
- Ⓑ 2¾" Bolts (4)
- Ⓒ 2" Bolts (8)
- Ⓓ 1½" Screws (8)
- Ⓔ Glider Hangers (4)
- Ⓕ Allen Wrench (1)
- Ⓖ Star Drive Bit (1)



## TOOLS NEEDED

Power Drill or Screwdriver

## STEP 1

Attach the back assembly to the seat assembly. Align the predrilled holes on the bottom of the back side pieces with the threaded inserts on the back of the seat. Attach with two 3½" bolts. (See photos 1 & 2.)

**NOTE: Do not fully tighten these bolts until Step 2 is completed.**

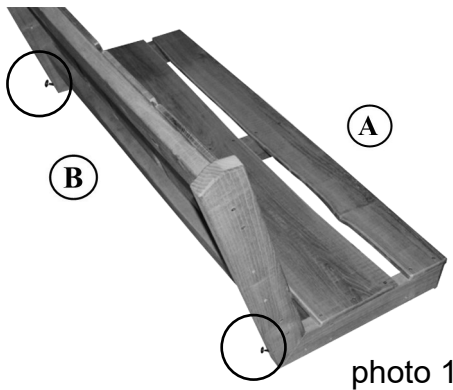


photo 1

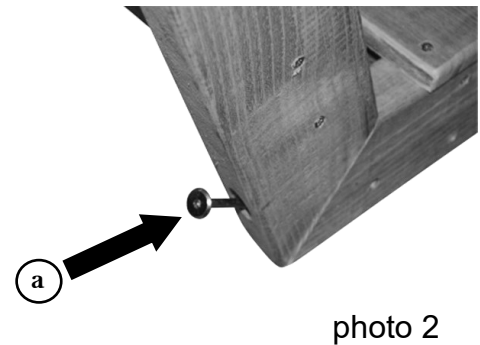


photo 2

## STEP 2

Attach the right & left arm & leg assemblies as shown. Align the two predrilled holes in the legs with the threaded inserts in the side of the seat & fasten with two 3½" bolts. Align the hole in the back of the arm with the hole in the side of the back & fasten with a 2¾" bolt. (See photos 3 & 4.) If you have problems aligning the holes, loosen the bolts that attach the back to the seat. Fully tighten all bolts with the Allen wrench.

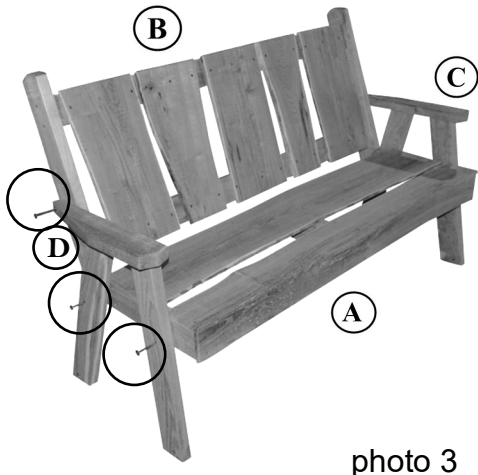


photo 3

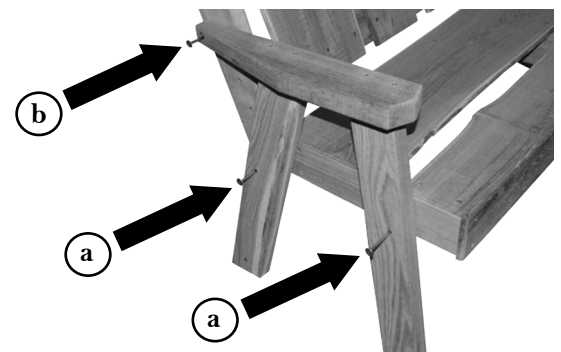


photo 4

### STEP 3

Assemble the glider base. Take the glider feet & set them on the floor. The 2x4 blocks belong on the inside & the end with the threaded insert close to the front edge belongs on the front. Take the glider braces and attach to the outside of the 2x4 blocks on the glider feet, one on the front & one on the back. Place four 1½" screws in the predrilled holes & screw into the blocks. (See photos 5 & 6.)

**NOTE: The bark edge on the glider braces must be turned down.**

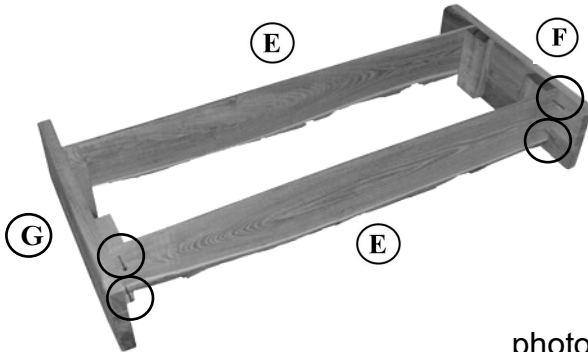


photo 5

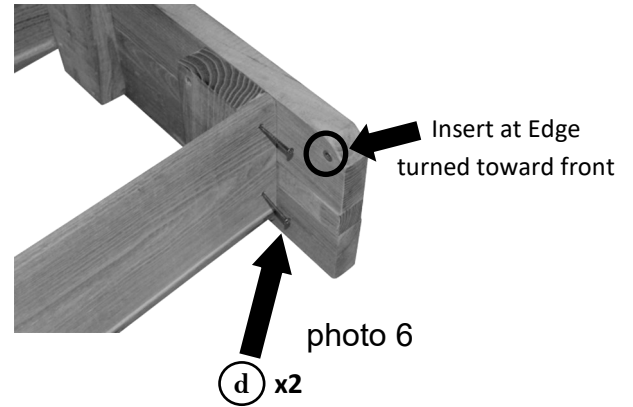


photo 6

### STEP 4

Attach the glider hangers to the bottom of the glider legs. Place the hangers on the inside of the legs. Put a 2" bolt through the hanger & turn into the threaded inserts in the glider legs. Tighten with the Allen wrench. (See photos 7 & 8.)

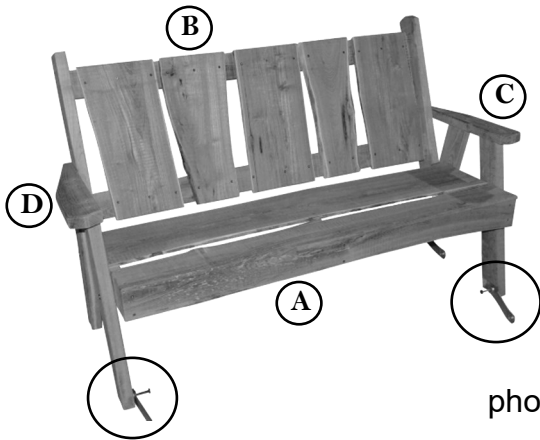


photo 7

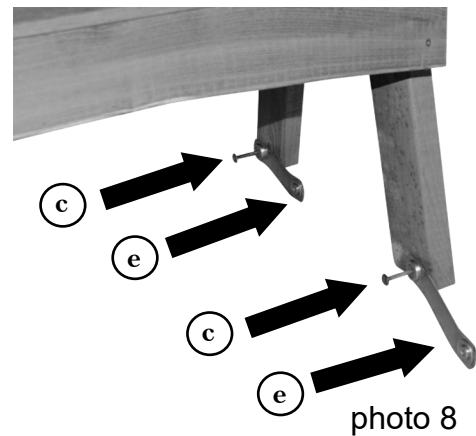


photo 8

### STEP 5

Now set the glider on top of the base. Attach the other end of the glider hangers to the top of the glider feet. Put the last four 2" bolts through the hangers & turn into the inserts in the feet. Make sure you have the base turned correctly with the inserts closest to the front edge of the feet turned toward the front. (See photos 9 & 10.)

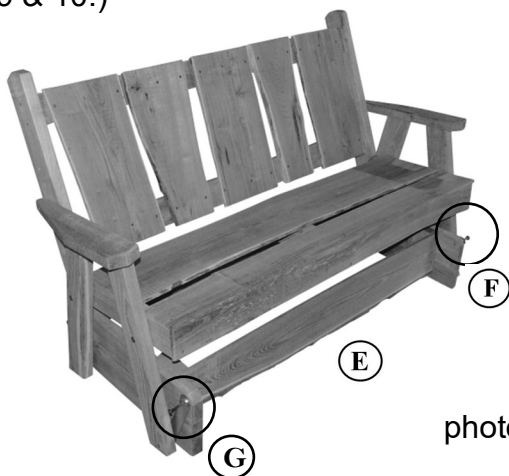


photo 9



photo 10